

# RF WIFI Wireless Thermostat User Manual

Download “Smart RM” or “Smart life” app from Google play and app store.



Choose one WIFI matching method of following 2:

● WIFI matching on thermostat: connect to voltage and turn on thermostat, long press for 3-5 seconds, when “OFF” and “” are flashing at the same time, short press to match WIFI when WiFi and cloud icon are blinking together

● WIFI matching on receiver: connect to voltage and turn on receiver, long press receiver “push” button to match WIFI, when flashes quickly blue light is EZ matching mode; when flashing slowly blue light is AP matching mode.

**! IP matched before delivery, please confirm thermostat and receiver connected well and is working before matching WIFI.**

**Blue light on receiver is signal indicator, it is blinking when receive wifi matching signal.**

## Technical Data

☆ Power: Receiver: 230Vac 50/60HZ Thermostat: USB power supply/4\*AAA Batteries

**! Pls remove batteries when USB power is working.**

☆ Display accuracy: 0.5°C

☆ Insulating condition: Normal environment

☆ Probe sensor: NTC(10k)1%

☆ Running program: Set per 1 week as a cycle

☆ Contact capacity: 5A/250V(WW);16A/250V(WE)

☆ Output: Switch relay


☆ Working environment temperature: 0~70°C

☆ Installation: Wall mounted or on battery seat

☆ Range of temperature adjustment: 5~35°C

☆ Size(mm): 130\*90\*25

## Home Screen

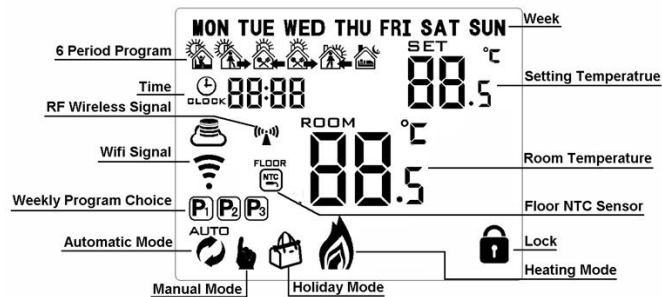

Program mode; run preset program

Temporary manual mode

Holiday mode, Holiday days and temperature can be set to run in countdown mode

Heating, icon disappears to stop heating

WIFI connection, flashing EZ distribution mode

Manual mode

Clock

External NTC sensor

Child lock

: Low power

Wifi status: Disconnection

Cloud icon: flashing AP distribution network mode

RF communication icon: It is always on display when it is normal, and it means communication is abnormal when it is flashing

Program mode type :

P1 is 5+2 days; P2 is 6+1 days; P3 is 7 days (every day was same)

## Quick Operation

NO	Icon	Description
A		Turn ON/OFF
B		1 Short press  to switch programming mode and manual mode 2 Power on state, long press  for 3-5 seconds to do program mode setting 3 Power off state, long press  for 3-5 seconds to do advanced option A
C		1 Confirm key 2 Power off state, long press  for 3-5 seconds to do advanced option B 3 Power on state, long press  for 3-5 seconds to setting, short press  choose holiday mode, then “OFF” will flashing, press  or  change to “ON”, short  switch holiday days and holiday temp, then press  activate holiday mode.
B		1 Decrease key 2 Long press to lock /unlock keys
D		1 Increase key 2 On program mode state, press ,  to enter into temporary manual mode 3 Long press to check external sensor temperature (only used for the receiver with external sensor)

## Time Setting

Power on state, press to set minute. Second press to set hour. Third press to set week.

Press , to change value. Press again to confirm.

## Holiday Mode Setting

Power on state, long press for 3-5 seconds to setting, short press choose holiday mode, then “OFF” will flashing, press or change to “ON”, short switch holiday days and holiday temp, then press activate holiday mode.

## Program Mode Setting

**6 times period setting: 5+2 days(factory default), 6+1 days, 7 days**

Turn on thermostat, long press “” 3-5 seconds to do Program Mode Setting . Short press “” to switch and confirm. Press “” and “” to adjust value. After finish setting , stand for about 10 seconds ,it will save setting then exit .

Wake up	Out door	Back home	Out door	Back home	Sleep
6: 00 21°C	8: 00 17°C	11: 00 21°C	13: 30 17°C	17: 00 21°C	22: 00 17°C

## Advanced Option A

Power off state, long press for 3-5 seconds to do advanced option A. Short press to switch and confirm. Press and to adjust options.

After finish setting , stand for about 5 seconds ,it will save setting then exit .

NO	Setting Options	Data Setting Function	Factory Default
A1	Temp Calibration	-9-+9°C (Displayed as the corrected room temperature value)	-1°C
A2	Start/stop working temperature difference setting	0.5-2.5°C	1°C
A3	High temperature protection temperature difference setting	1-9°C	2°C
A4	Child Lock	0:half lock      1:full lock	0
A5	High temperature protection for external sensor	20°C-70°C 1. When setting temp = 20°C, , if press  will display <b>【--】</b> , cancel high temperature protection	45°C
A6	Low temperature protection	1-10°C When setting temp = 10°C, if press  will display <b>【--】</b> , cancel low temperature protection	5°C
A7	Setting temperature minimum limit	1-10°C	5°C
A8	Setting temperature maximum limit	20-70°C	35°C
A9	Power on/off state memory after electricity cut	0:Thermostat on/off with memory when electrify 1:Thermostat off when electrify 2:Thermostat on when electrify	0
AA	Program mode type	P1: 5+2 P2: 6+1 P3: 7	P1
AB	Factory defaults	Display Ao, long press  until show the whole screen	

## Advanced Option B

Power off state, long press for 3-5 seconds to access advanced option B.

short press to choose the option, and adjust data by OR , Rmain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
B1	IP code high setting	00-FF	00
B2	IP code low setting	01-FF	01
B3	Thermostat and receiver paired	Within 10 seconds after the receiver connection (the orange LED is always on), then continuously clicking the  button of the thermostat, the thermostat will send the IP to the receiver, display"55" means IP match successfully.	00
B4	Sensor type	N1:single built-in sensor N3:both built-in sensor and external sensor.	N1
B5	Minute interval of RF transmission	0-30 minutes	20
B6	Second interval of RF transmission	3-30 seconds	30

**! Considering battery usage, RF data updates every 20 minutes. If you wanna shorten interval, pls use USB power and remove batteries. Follow B05, B06 operation.**

**Return difference** : limit valve of external sensor is 45°C for factory default (A5),value of external sensor control return difference (A3) is 2. when temperature rise to 45°C,then relay stop working and will remind high temperature production alarm. If temperature decline to 43°C relay continue to work and heating alarm will be relieved. (it can be operated ,only when room temperature is lower than setting temperature )

**Sensor fault display**:please choose correct working way of sensor type, if choose wrongly or sensor fault (breakdown), "E1" or "E2" will be displayed on the screen. Thermostat will stop heating until the fault is eliminated

## Description of thermostat data communication:

1. Communication every 20 minutes under normal working conditions
2. On/off will communicate with the receiver once time
3. When the output status is switched, it will communicate with the receiver once.

: It is always on when wireless communication is normal, and it flashes when wireless communication is abnormal.

## Receiver Indicator Light

**Power indicator (green)**: Power on receiver, green light always on; turn off receiver, the green light is on for 1 second and off for 1 second.

**RF signal indicator (orange)**: It is always on within 10 seconds after power-on (At this time, you can send the IP address of the thermostat to the receiver to complete the pairing: refer to the advanced option B3). After the pairing is successful, the signal light will be off; or if no pairing is performed within 10 seconds It will automatically turn off; when it is working normally, the light will flash when it receives a wireless signal.


**Load/fault indicator (red)**: In normal operation, the load output is turned on, the light is on, and the load output is off, and the light is off; when there is a fault, it blinks and the alarm is indicated as

follows:

1. The thermostat and the receiver are not paired: flashes 2 times (quick flashes), and the interval is off for 2 seconds
2. Loss of wireless signal (no data communication in 1 hour): flashes 3 times (quick flashes), with an interval of 2 seconds off
3. External sensor alarm: flashes 4 times (quick flashes), with an interval of 2 seconds off (only valid when the sensor type is selected as N3 in the advanced options of the thermostat)

**WIFI signal indicator (blue):** When WIFI data is received, it will flash once; continuous fast flashing means it is in WIFI EZ network configuration mode; continuous slow flashing means it is in WIFI AP network configuration mode; it will always be when the network is successfully configured. On; when the WIFI is abnormal, it will flash twice quickly, and the interval will be off for 2 seconds.

## Wiring Diagram

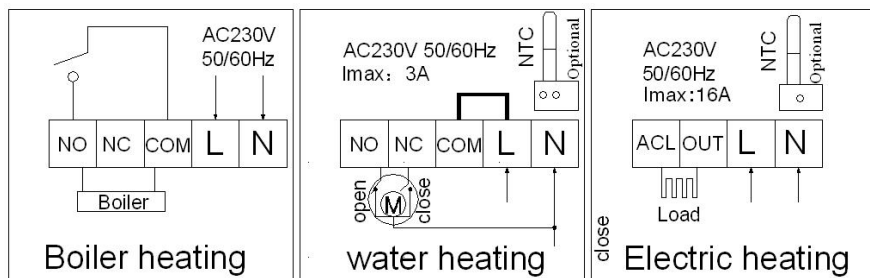

### RISK OF ELECTRICAL SHOCK

Please arrange professional technician to install the product according to drawings and instructions.

Disconnect power supply before making any connection. Contact with components carrying hazardous voltage can cause electrical shock.